



1) Paint the eyelids in the colour of your car.

2) Place the respective cardboard pattern on each headlight and mark a line with a good felt pen where the lower edge of the pattern comes to, also marking each end (Pic 1).

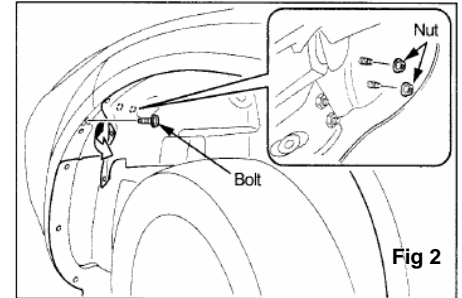


Pic 1

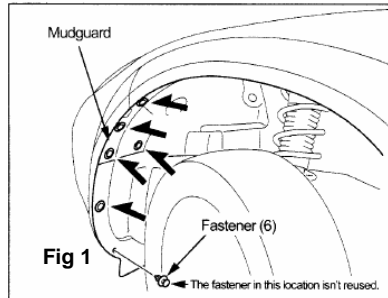

3) Remove the front bumper. (requires 2 people)

1. Remove the six fasteners of the mudguard as shown in Fig 1.
2. Turn over the mudguard and remove the bolt and the two nuts by following the procedure given in Fig 2. (Carry out the same operations for the right side.)
3. Remove the covers (one each at left and right), and then remove the bolts B (one each at left and right) Fig 3.
4. Remove the bolts A (four each at left and right) and the screws (four each at left and right) Fig 3.
5. Disconnect the fog lamp cables (two places) and remove the clips from the vehicle. (Vehicles with fog lamps only)
6. Pull the rear of the front bumper toward the outside to disengage the front bumper from the bumper slider.

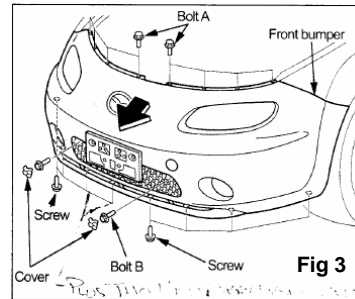

4) Apply the adhesive primer to the area of the headlamp where the eyelids will be fixed and allow to dry.

IMPORTANT: only attempt to attach the eyelids in a warm and dry environment

5) Attach the double sided tape to the outer edges of the back of each eyelid, peel off the backing and carefully attach the eyelid to the headlamp, carefully following the line you marked in step 1.



6) Refit the bumper following the reverse of the procedure in 2.

7) The result should look like this ☺

