


Supplied Components:

- Rear Subframe Brace
- 2 M8 x 1.25mm Nylock Nuts
- 2 M8 Penny Washers

Recommended Tools:

- Trolley Jack
- Pair Axle Stands
- Wheel Chocks
- 13mm Ring Spanner
- Anti-Seize Copper Grease

- 1. Position the vehicle on a LEVEL surface and chock front wheels.**
2. Raise the rear of the vehicle and position axle stands under offside and nearside jacking points at the rear of the sill.
3. Hold brace bar to the rear of the subframe, the two threaded studs will pick up with two holes already in the subframe.
4. Insert brace bar studs through these two holes, apply copper grease to the two studs and place penny washer and locknut on the studs and tighten securely.
5. Remove axle stands, lower vehicle to the ground and remove chocks from front wheels.

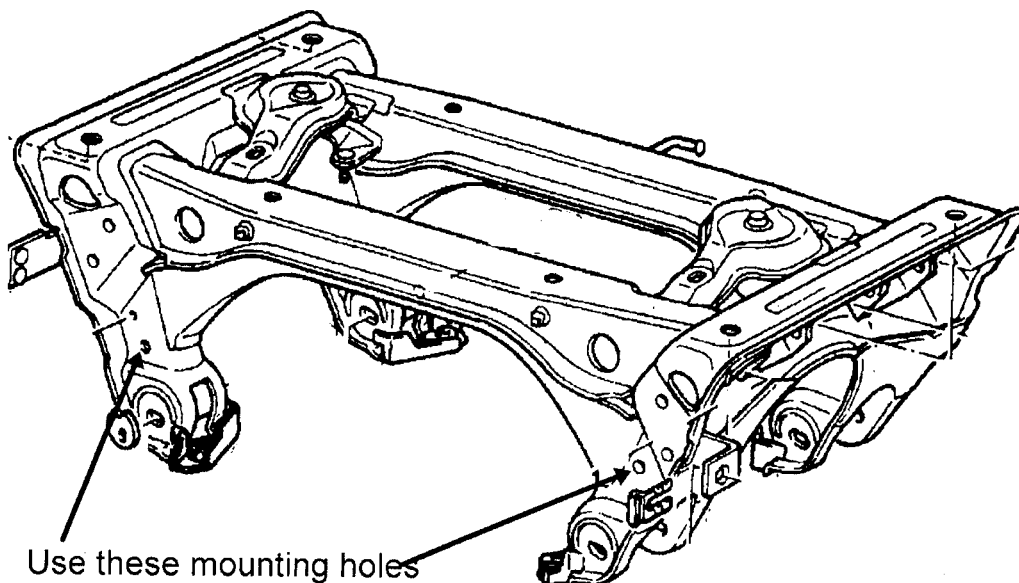

Scimitar International Ltd.
Unit 4, Cluster Industrial Estate
Rodney Road, Portsmouth
Hampshire, PO4 8ST
Tel: 0845 345 2384 Fax: 0845 345 2385
Website: <http://www.mx5parts.co.uk>

© Copyright 2002, Scimitar International Ltd.

These fitting instructions are supplied in good faith, and as a guide only. We accept no responsibility or liability for any damages, injury or loss caused as a result of following these instructions. Your statutory rights are not affected.