


Remove the tonneau cover clips (A) from the side of the seat belt towers and ensure you put them in a safe place.

On the windblocker you should find two black brackets (B) on the end of each side. If not, these should be in the box and need attaching. Place the big holed end on the windblocker screw and fix with the nut supplied.

Once you have the brackets attached, time to start mounting the windblocker to the car.

First of all, go back to the tonneau clip screws, and place one side of the windblocker on slightly. Start to re-attach the end clip but only turn it once so its just resting on there, holding the bracket in

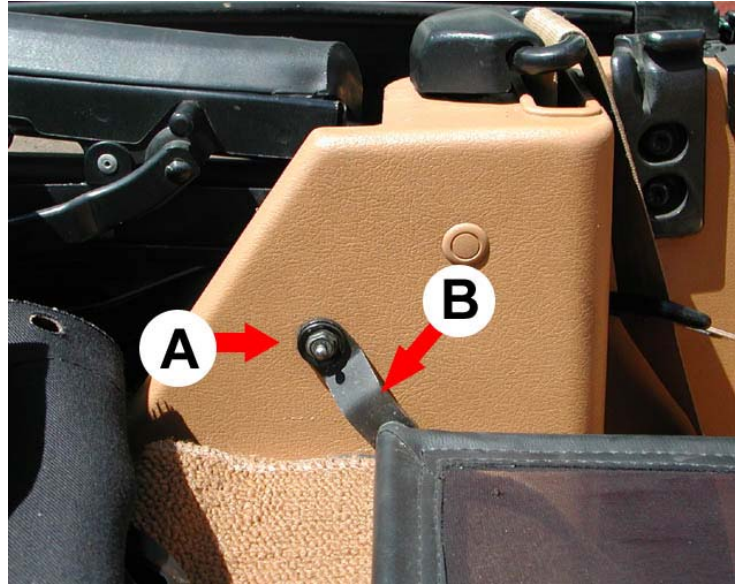

Now go to the other side and do the same (Some pressure may be required to fit this side, you may have to push it to get it to reach) Then slowly start re-attaching the screws bit by bit, going from one side to the other and back again and so on.....

Eventually with pressure the brackets should flex into place and your windblocker will be able to stand and lower at your command.



Scimitar International Ltd.
Unit 4, Cluster Industrial Estate
Rodney Road, Portsmouth
Hampshire, PO4 8ST
Tel: 0845 345 2384 **Fax:** 0845 345 2385
Website: <http://www.mx5parts.co.uk>

© Copyright 2002, Scimitar International Ltd.